



TERRA LANA
CHATTERBLOCK® COMMERCIAL
WOOL ACOUSTIC BLANKET
INSTALLATION GUIDE

- GENERAL INSTRUCTIONS
- INSTALLING

0800 485 262

sales@terralana.co.nz

terralana.co.nz



TERRALANA

TERRA LANA CHATTERBLOCK® COMMERCIAL WOOL ACOUSTIC BLANKET GENERAL INSTALLATION INSTRUCTIONS

SAFETY FIRST

- Terra Lana CHATTERBLOCK® Commercial Wool Acoustic Blanket is non-irritant, non-toxic and is completely safe to handle, however a dust mask and safety glasses are recommended during installation.
- Ensure a clear work environment, eliminating potential hazards such as sharp objects and obstructions.
- Identify all potential electrical hazards.

TOOLS AND EQUIPMENT

- A Bahco (or similar) Insulation Saw and sharpener (available from Terra Lana or local building merchants).
- A custom cutting jig can be made on site, using ply with a slot and 140 x 45 timber on a hinge to compress the insulation. An insulation saw & sharpener are required – contact Terra Lana for more details.
- [Terra Lana Insulation Clamp](#) (for hire)—Requires air compressor and Bahco (or similar) Insulation Saw & sharpener.
- For ongoing installation of insulation, a battery operated [Festool ISC 240](#) Insulation Saw, guide rail & angle stop can be purchased from Festool stockists – [see instructional video here](#). A sharpener will also be required.
- Hammer Tacker or Electric Stapler.

RETURNING OFFCUTS TO TERRA LANA

All CHATTERBLOCK® offcuts can be returned to the factory for recycling – See [guide](#) and [video instructions](#).

INSTALLING THE INSULATION

- Prior to installing, please check you have the correct product, including the correct width.
- Do not compress the product, unless this is a design specification, as this will reduce the performance. Ensure there are no gaps between segments.
- An insulation saw may be used to cut the product.
- Install within three months of the manufacturing date on the packaging to ensure full loft recovery.
- Specific clearances are required around flues, chimneys, Non CA rated recessed lighting and exhaust fans—refer to NZS4246 for further information.
- IC and IC-F rated downlights can be covered by CHATTERBLOCK® in accordance with NZS60598.2.2:2016 clause 2.4.104.1 & 2.4.104.2

building **wool** innovation for life.




0800 485 262
sales@terralana.co.nz
terralana.co.nz



INSTALLING

CHATTERBLOCK® COMMERCIAL WOOL ACOUSTIC BLANKET

- See **general instructions** for handling CHATTERBLOCK® (page 2 of this document).
- Always ensure CHATTERBLOCK® is 5-10mm wider than the framing gap to ensure a friction fit with no gaps.
- Ensure CHATTERBLOCK® is well supported by ceiling battens or rondo battens prior to lining being installed.
- If the walls have no dwangs/nogs, stapling the product to the top plate is recommended to give additional support. For areas with no lining on one side of the studs, such as void walls, stapling the product is recommended.
- Make every effort to avoid gaps and holes when installing around plumbing pipes and electrical wires.
- Off-cuts can be returned to the Terra Lana factory. Please contact Terra Lana to arrange.

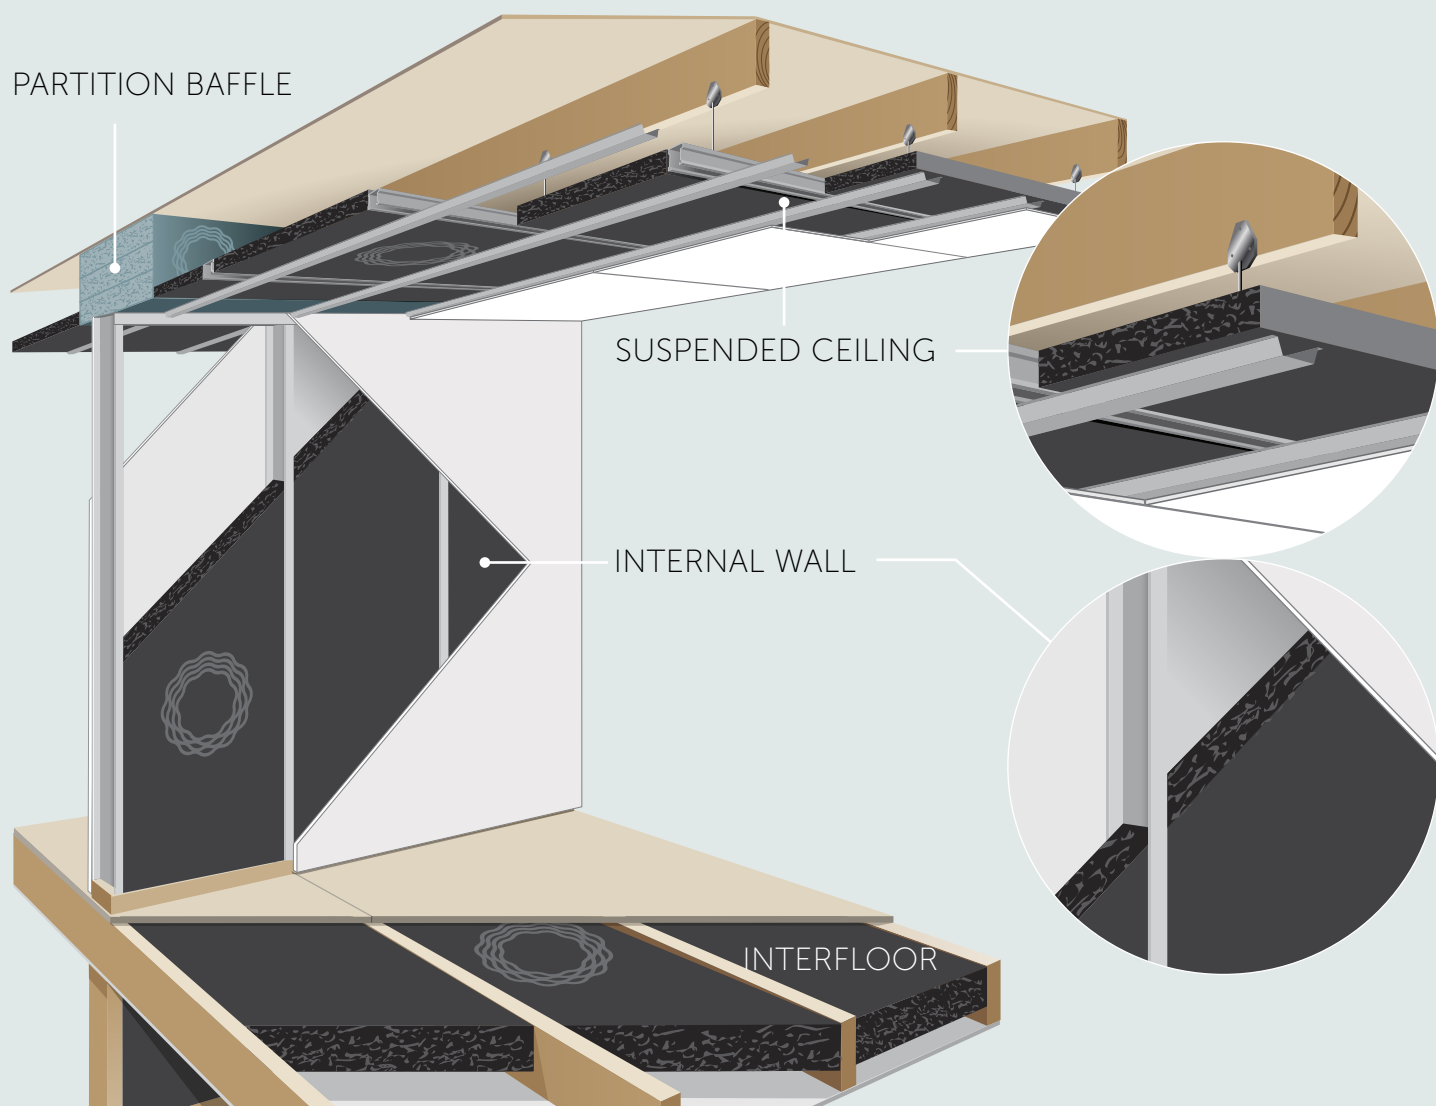

building **wool** innovation for life.



0800 485 262
sales@terralana.co.nz
terralana.co.nz



TERRALANA