
DAGMAT® WOOL GEOTEXTILES RECOMMENDED FIXINGS

Choose fixings according to holding power, removal afterwards, and conditions: hard - soft ground, slope, and wind and water exposure factors. We recommend TerraPeg 150mm

TERRAPEG

BIODEGRADABLE



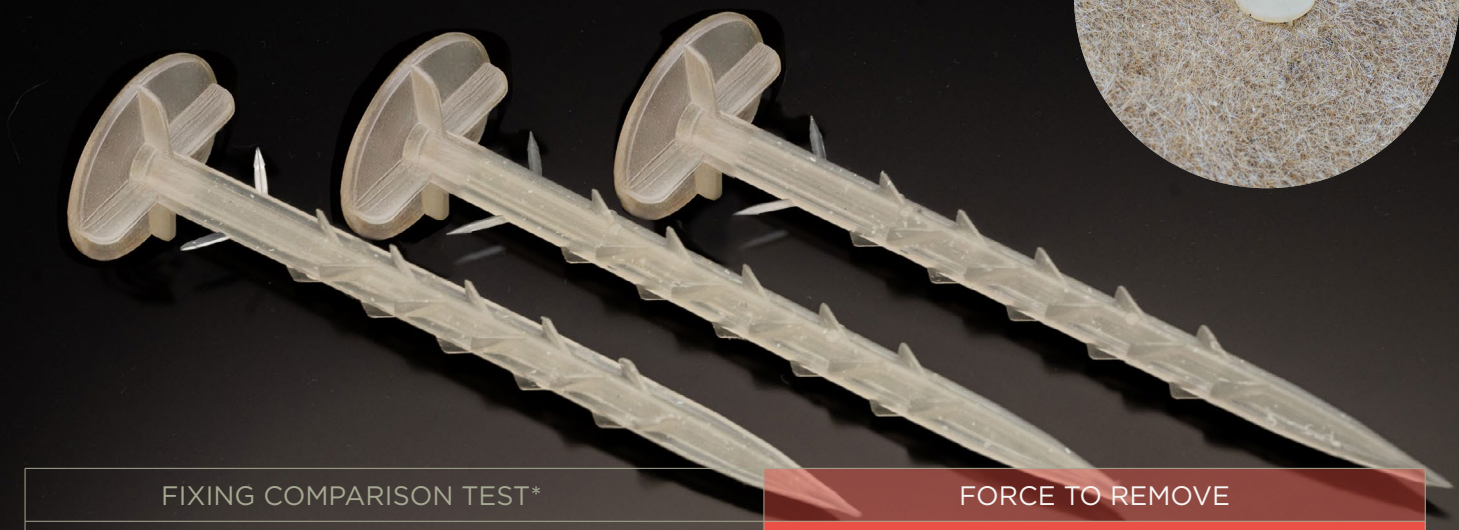

FIXING COMPARISON TEST*	FORCE TO REMOVE
TERRAPEG 150mm	4.9 kg
STEEL STAPLE 150mm	1.8 kg

*3rd party testing conducted by Trace Laboratories Inc.

STRONGER FIXING

The barbed design of TerraPeg biodegradable fixing pegs provide ground grip much greater than wood or steel staples, with larger head to stop pull-through, ensuring better holding power to anchor DagMat. Biodegradability saves removal.

- Sugar-based, 100% renewable resource
- 2-3 times the holding power of equal length steel staples
- Biodegrades in 3-10 yrs+ (depending on conditions)
- Install using a mallet—rubber is best
- Ideal for all Dagmat products and weights.

TRULY BIODEGRADABLE

TerraPegs are manufactured from a natural, sugar-derived bio-resin.
(ASTM-D6866 and Vincotte Class 4 highest cert.).

They are durable, yet biodegrade over time in the ground (ASTM-D6954)—unlike many biodegradable plastics that compost only in facilities at 40-60°C (ASTM D6400).

LENGTH	LIFETIME	INSTALL
150 mm	3-10 yrs+	Rubber/Steel Mallet

IECA MEMBER

NEW ZEALAND MADE

Infrastructure Sustainability Council MEMBER

building wool innovation for life

0800 485 262
sales@terralana.co.nz
terralana.co.nz


TERRA LANA®

DAGMAT® WOOL GEOTEXTILES INSTALLATION

v JUL2026

FLAT & GENTLY SLOPING SITES

For sites <25º and not exposed to high wind or water flow, clear area of weeds, grass and obstacles—spraying may be required. **Good contact with the soil** is critical to adhere DagMat to the ground. Loosely lay matting with a minimum of **200mm** overlap. **Do not stretch or pull tight** as the mat may shrink after exposure. Fix with TerraPegs **every 500mm**, (5+ per M²) and about every 250mm on prevailing wind/flood edges. Use a sharp knife to cut plant insertions.

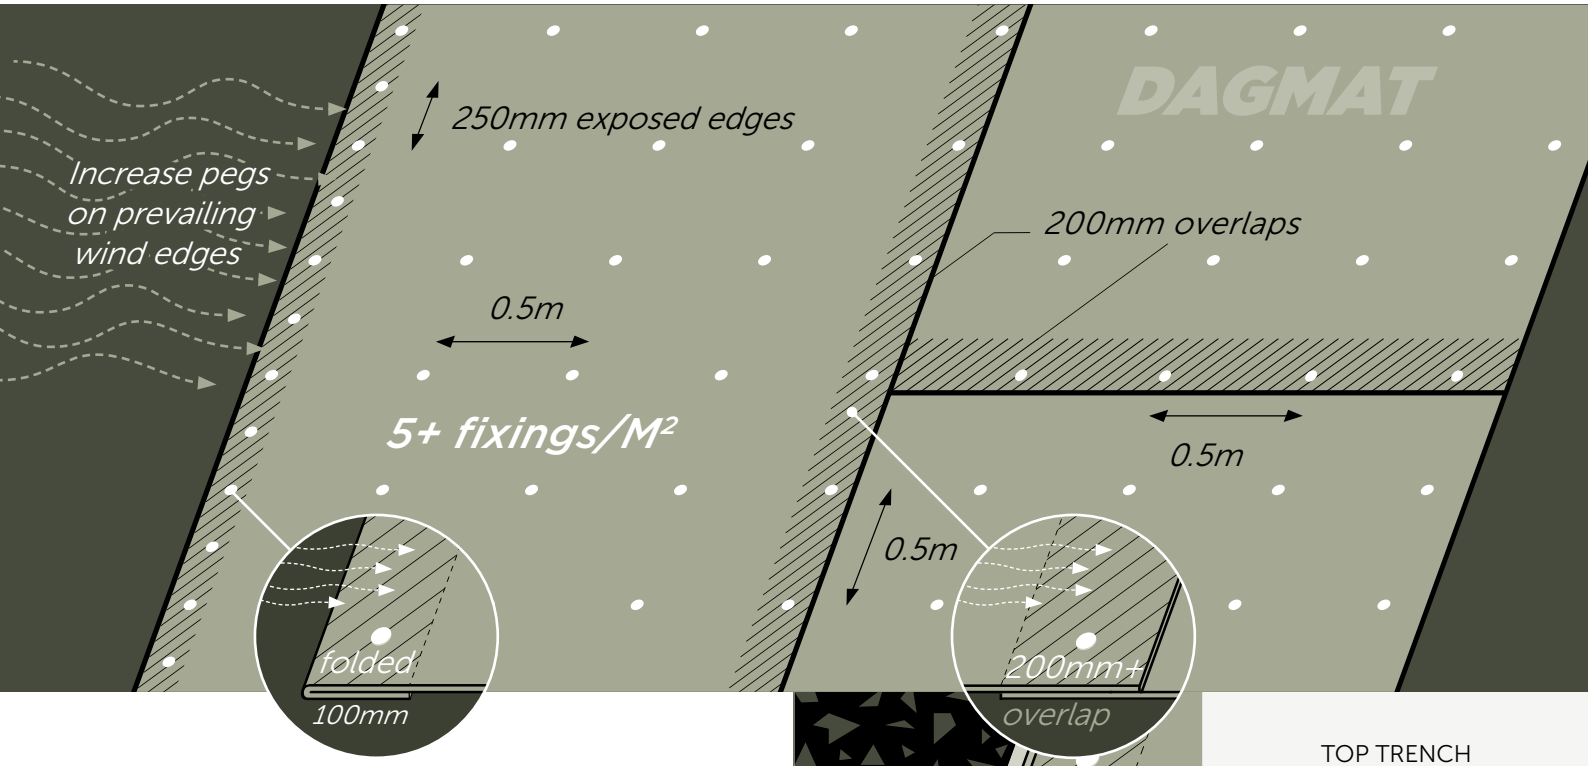

SLOPING OR EXPOSED SITES

For steeper gradients and areas exposed to wind or flood flow, use closer fixing centres and a heavier gsm DagMat. Fix prevailing edges accordingly—every 250mm recommended. Ensure pegs are not less than **50mm from edges**. Determine overlaps by the prevailing wind.


EDGES


FOLDED EDGES


For edges abutting paths, or exposed to wind, fold under by 100mm, ensuring the pegs go through both layers.

BURIED EDGES

Prevailing wind, flood or mowing edges can be buried. Ensure the matting is pegged just above the trench, as buried matting may biodegrade faster.

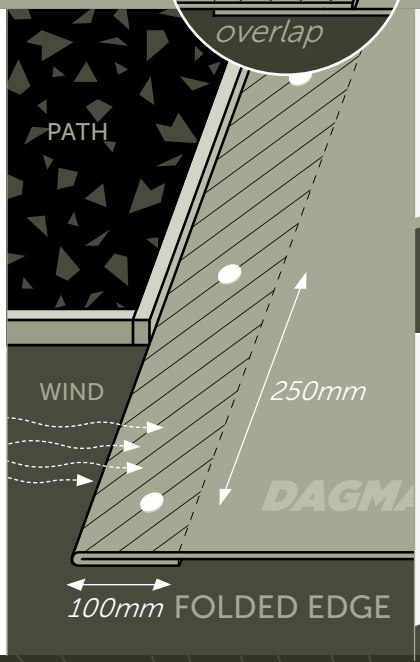

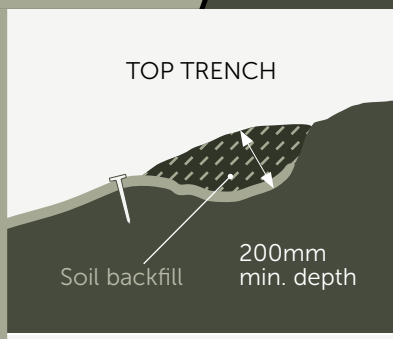

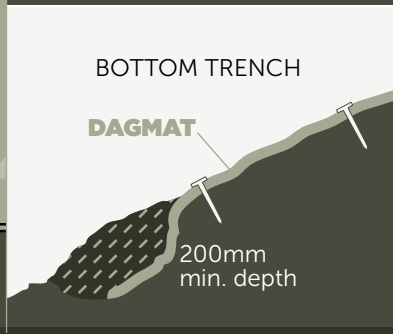

IECA MEMBER
NEW ZEALAND MADE
Infrastructure Sustainability Council MEMBER

building wool innovation for life

0800 485 262
sales@terralana.co.nz
terralana.co.nz

TERRA LANA